

# FOSHO-2366US Usermanual - Fospower

**Height:** 124mm


**Width:** 76mm

**Print:** Front

**Fold:** Fold


## 7 Day Digital Programmable Outlet Timer with Two Outlet

Operating Instructions

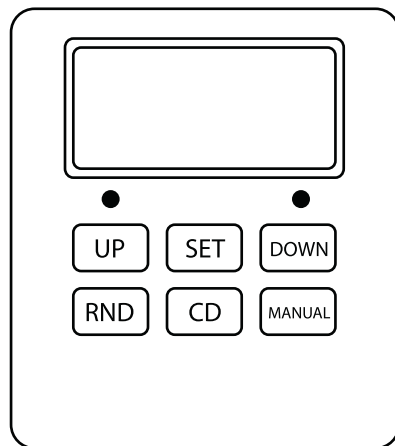

### Disclaimer Statement

FosPower shall not be liable to you or anyone else for any loss, injury, hearing damage or damages relating to this product. FosPower shall not be liable for any damage or destruction to personal properties that are contained inside or outside the FosPower product.

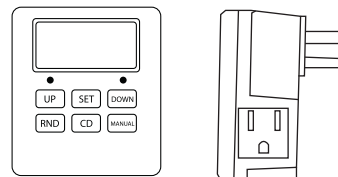

### Specifications

- Voltage: 125VAC 60Hz
- Max load: 15A Resistive or General purpose
- 125VAC,60HZ,15A,Resistive
- 125VAC,60HZ,15A, General purpose
- 125VAC,60HZ,10A / 1250W,Tungsten
- 125VAC,60HZ,1/2HP TV-5
- Min Setting Time: 1 Minute
- Operating temperature :-10 oC to +40 oC
- Accuracy: +/- 1 minute per month
- Battery backup:NiMH 1.2V >100hours
- INDOOR USE ONLY
- ETL Listed

### Package Includes

- 7 Day Digital Programmable Outlet Timer with Two Outlets x 1
- User Manual x 1

### Features

- 10 ON/OFF programs with 1-minute interval
- AUTO/MANUAL option
- 12/24 hour mode selectable
- LCD display with seconds.
- Daylight Savings Time
- Random function with random time activation of 10-31 minutes between 6.00pm and 6.00am
- 16 options including 7 individual ones for each day of the week and 9 combinations for multiple days:

**MO/TU/WE/TH/FR/SA/SU**

**MO, TU, WE, TH, FR, SA, SU**

**MO, TU, WE, TH, FR**

**SA, SU**

**MO, TU, WE, TH, FR, SA**

**MO, WE, FR**

**TU, TH, SA**

**MO, TU, WE**

**TH, FR, SA**

**MO, WE, FR, SU**

- Maximum of 99 hours 59 minutes 59 seconds CD (Countdown) function.

### Install Setup Before Operating

#### 1. Charge the battery

Plug the timer into a regular 125V wall outlet for 10-minutes to charge the back-up battery.

#### 2. Reset the Timer

Press the RESET button after charging to clear any data in memory.

#### 3. Set the Date and Time

- Press SET button for 2-seconds until "MO" for Monday begins to flash. Press UP or DOWN button to select the day of the week.
- Press SET button to advance to the "Hour" and "Minute" setting.
- Press UP or DOWN button to select.
- Press SET button one more time to complete setup.
- To reset the current time, repeat the steps above.

#### 4. 12/24 hour mode

*NOTE: The time on the system is by default 24-hour mode.*  
Press CD and SET button simultaneously to change to 12-hour mode. "AM" will be in display.

#### 5. Daylight Savings Time

Press MANUAL and SET button simultaneously to add 1-hour for Daylight Savings and "S" will appear in the display. To set it back, press the two buttons simultaneously and "S" will disappear in the display.

### Program Timer

- While in clock display, press UP button once to display the first ON setting 1 ON --:--.
- Press SET button once, the "MO" will begin to flash, press UP or DOWN button to select the day of the week or combination of days for this program.
- Press SET button again to advance to the "Hour" setting. Press UP or DOWN button to select. Repeat this step for the "Minute" setting.
- Press the SET button to complete the program setting.
- Press UP button again to advance to the first OFF setting 1 OFF--:--.
- Repeat the procedure 2-5 to create the OFF setting.
- Repeat steps 1-7 for additional ON/OFF program settings.
- Press UP or DOWN button simultaneously to exit program setting mode.

## Connect Devices to Timer

- Plug the timer into wall outlet.
- Plug home appliances into the timer and then turn on home appliance.

## Activate the Timer

Press MANUAL button as necessary to display:

"ON" – the plugged in device remains ON

"OFF" – the plugged in device remains OFF

"AUTO" – the plugged in device follows the programmed timer settings

Note: When mode is switched from MANUAL "ON" to "AUTO", the timer will keep the setting of MANUAL "ON" until the next timer program is executed.

## Note

- To reset any current program, press the MANUAL button in the program setting mode. The display will replace current time with "--:--". If you only want to use a few of the ON/OFF programs, please make sure the rest of the program setting displays "--:--".
- Check your programs to ensure that the settings do not overlap. If they overlap, the timer will execute according to the programmed time and not by program number. Program "OFF" has priority over program "ON".
- If you want to activate programs, please make sure the timer is in "AUTO" mode, and the "RANDOM" and "CD" functions are disabled.

4

## Random Function

- Press RND button to activate random function. LCD displays "R".
- When RANDOM function is activated, the timer will be in "ON" position randomly for 10-31 minutes during the time gap – from 6.00pm to 6.00am
- Press RND button to cancel this function. RANDOM function can't be set during PROGRAM and CD mode.
- The RANDOM function can only be executed in AUTO mode between 6.00pm and 6.00am.

## Countdown Function

- Please make sure the current operation mode is in "AUTO" mode. The "Random" function is disabled.
- While the timer is showing clock display, press DOWN button to set countdown program. The "CD" sign will be in display.
- Press SET button once, either "ON" or "OFF" will begin to flash, press UP or DOWN button to select countdown ON or OFF mode. If "ON" is selected the timer will be on during the countdown period. Then it will turn off after the countdown expires, and vice versa.
- Press SET button again to advance to the "Hour" setting. Press UP or DOWN button to select. Repeat this step for the "Minute" and "Seconds" setting.
- Press SET button one more time to complete this countdown setting.
- Press CD button once, this countdown program is activated. To stop the countdown, press CD button once again and it will show the time you have set.
- The "CD" will flash on the screen when press CD button in clock mode. This means the CD function is executed.

5

## WARNINGS

- Do not plug more than two timers at once.
- Do not plug in an appliance where the load exceeds 15Amp.
- Always ensure the plug of any appliance is fully inserted into the timer outlet.
- If cleaning of the timer is required, remove the timer from main power source and wipe it with a dry cloth. Do not immerse timer in water or any other liquid.
- Heaters and similar appliances should never be left unattended during operation. The manufacturer recommends such appliances not to be connected with outlet timers.

6

## Limited Lifetime Warranty

This product includes a limited lifetime warranty. Please visit FosPower website at [www.fospower.com](http://www.fospower.com) for more details.

## Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.

## Follow Us On Social Media



[www.fospower.com](http://www.fospower.com)

[support@fospower.com](mailto:support@fospower.com)

© 2018 FosPower Inc. All rights reserved.

All trade names are registered trademarks of respective manufactures listed.

## FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

7